


# Assembly Instruction for My7





# 1、 Removal

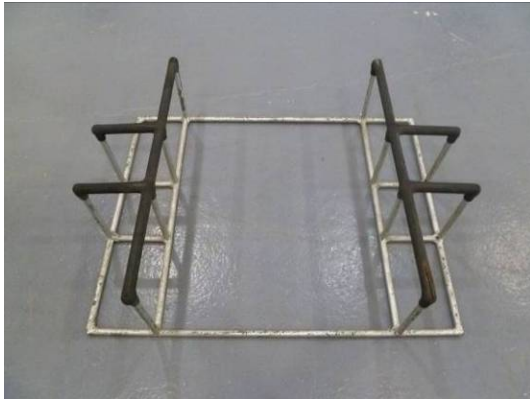



**(a) Place the machine onto the mounting rack carefully as shown in the picture.**



**(b) Remove the three fixing screws on the column and base plate with the proper tool as shown in the picture.**

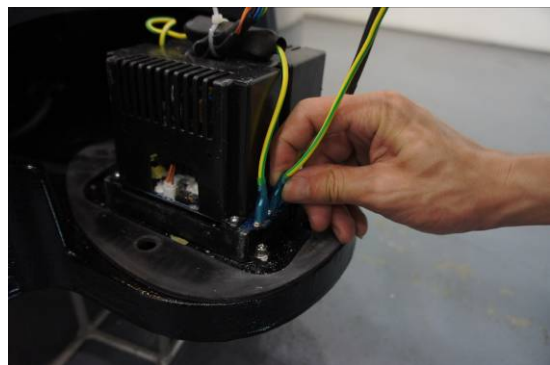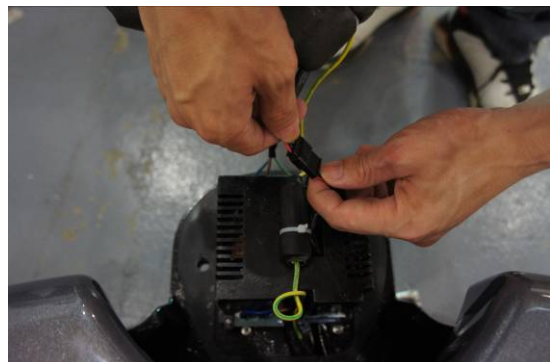



**(c) Lift the column with caution and pull out all the control wires slightly.**

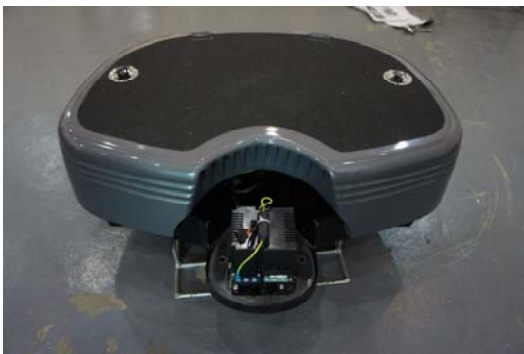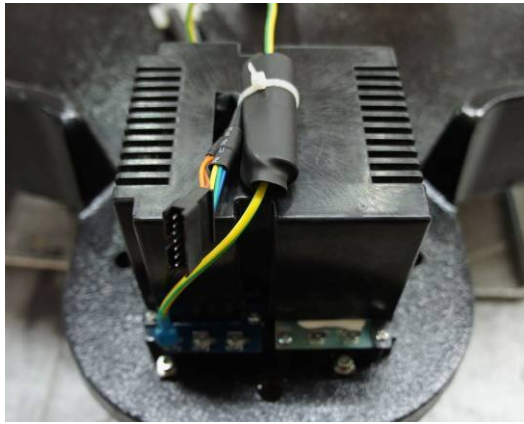


**(d) Put the column on the flat surface as shown in the picture.**




## 2、 Installation

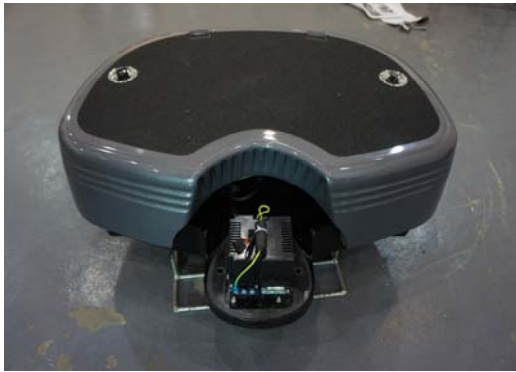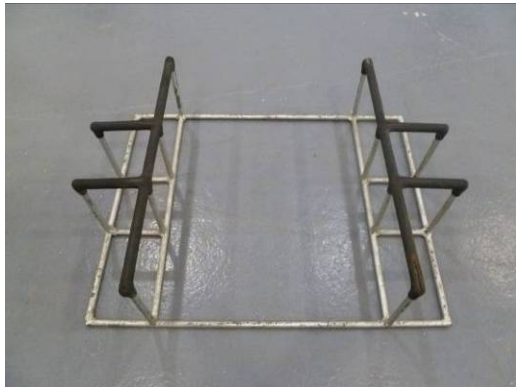

**(a) Place the base plate onto the mounting rack with caution and then move the column to the wiring area of base plate.**

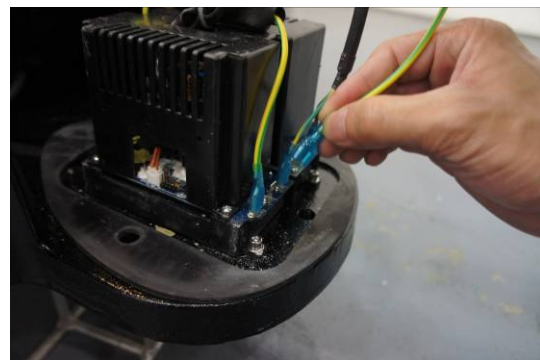

**(b) Make the connections for all the five control cables according to the following picture. Please make sure that all are connected correctly.**

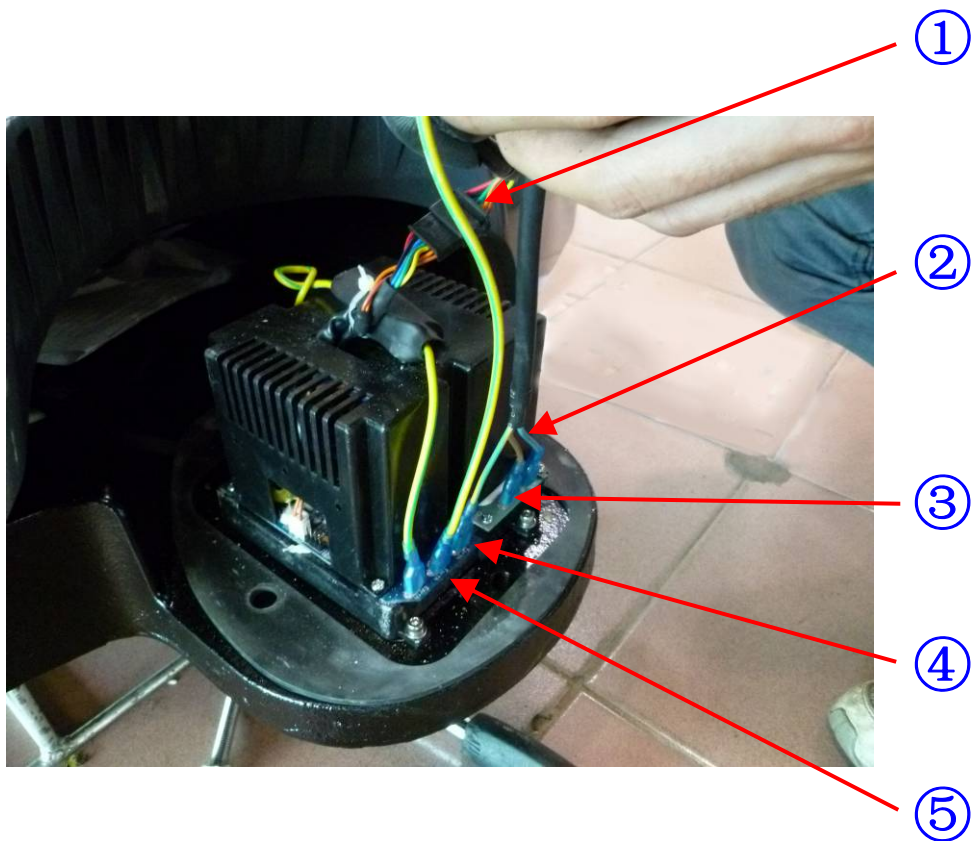

**(c) Make the connection for the five cables as shown in the picture:**

- ① Colored cable: Control panel signal cable**
- ② Blue cable: Filter power cable**
- ③ Brown cable: Filter power cable**
- ④ Yellow/green cable I: Filter ground cable**
- ⑤ Yellow/green cable II: Control panel ground cable**



**(d) Put the column onto the base plate as shown in the picture. Please be sure that the bottom holes of the column and the filter cover fit well during the assembly.**



**(e) Install the column with three screws, spring washers and the flat washers as shown in the picture. Make sure that the holes are aligned up and the screws are tightened properly.**