



pro8 Assembly Instructions



pro8 Assembly Instructions

Packaging Contents:

Column Carton

- 1 – Column Assembly
- 1 – Column Dust Cover
- 1 – Risers (set)

Platform Carton

- 1 – Platform Assembly
- 1 – Platform Dust Cover
- 1 – Power Cord
- 1 – User Manual
- 1 – Rubber/Foam Mat
- 2 – Straps
- 1 - Cable Extension Kit
- 2 – proMOTION Handles
- 3 – Column Securing Bolts
with Washers
- 3 – Guide Bolts
- 1 – Filter Terminal Cover



Tools & Hardware Included:

1 – 16mm Wrench

1 – Riser Blocks

3 – Securing Bolts & Guide Bolts (3 each)



STEP 1:


Remove the Platform Base from the carton and set both back corners on top of Risers (included) lifting off the floor 4-5 inches. Then install the Guide Bolts (included) into the three holes on the bottom of the Column. Cut off and take out heat shrink sleeve as shown below.






STEP 2:

Holding the Column next to the Platform Base, you **MUST** make the wire connections **BEFORE** securing the Column. Attached the Multicolored Data Cable #4 from the Column to the Platform connection, then attach #1 Blue and #2 Brown to the filter PCB terminals and finally #3 Yellow/Green wire to remaining terminal Ground (Earth). After all data cable connections are made. Use two M3×8 cross pan head screws to install Filter Terminal Cover.

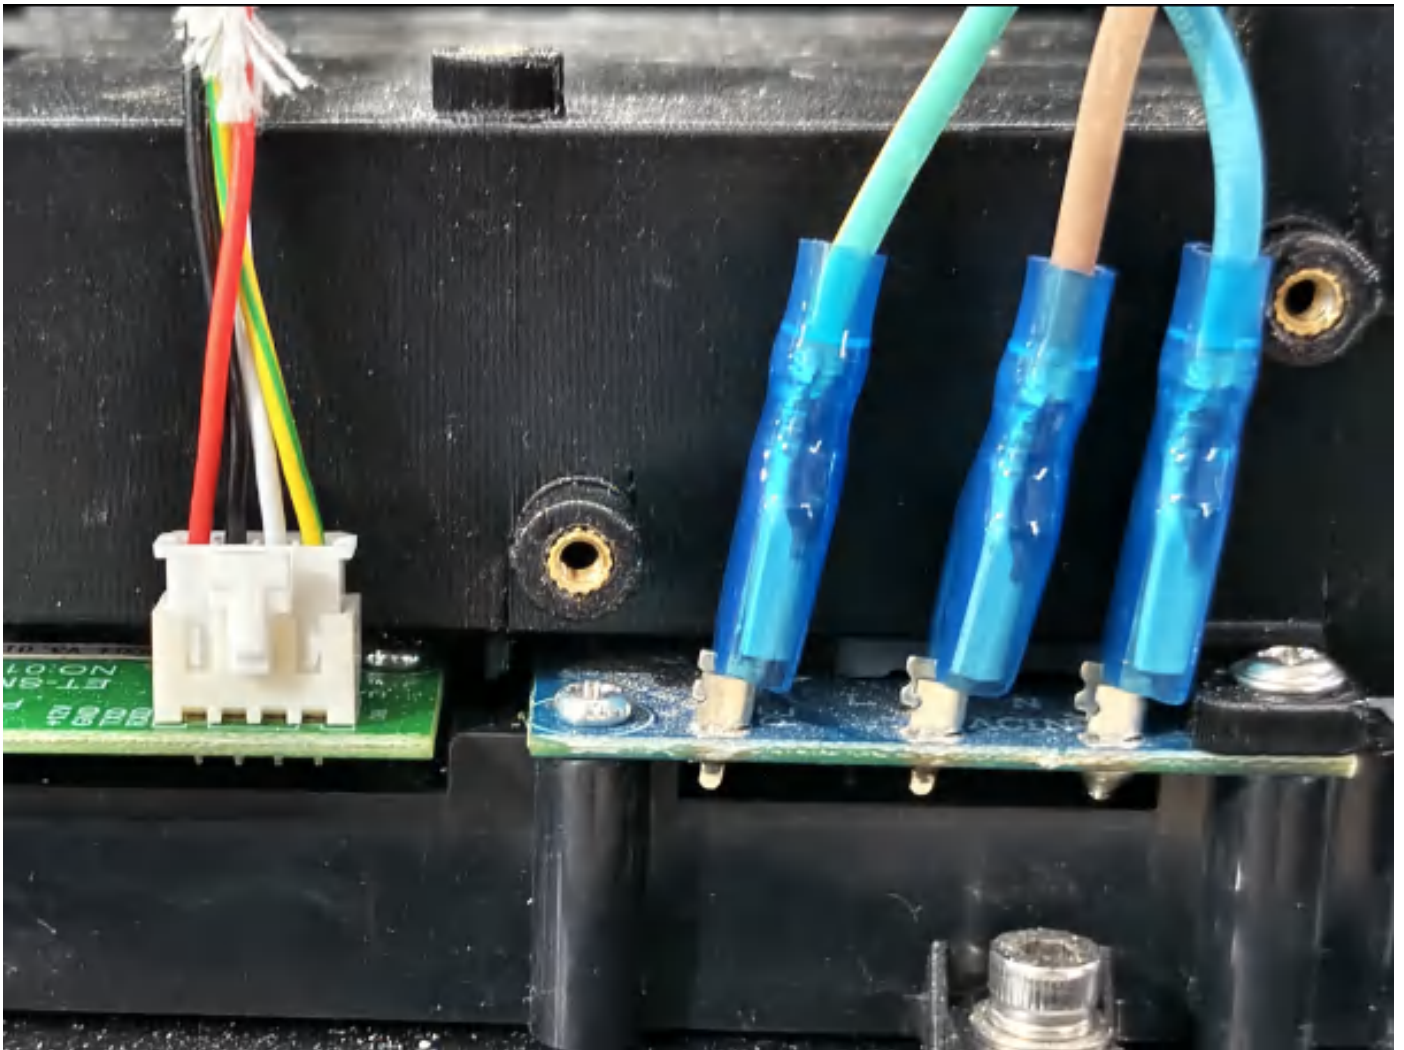


PLEASE double check cabling is installed correctly

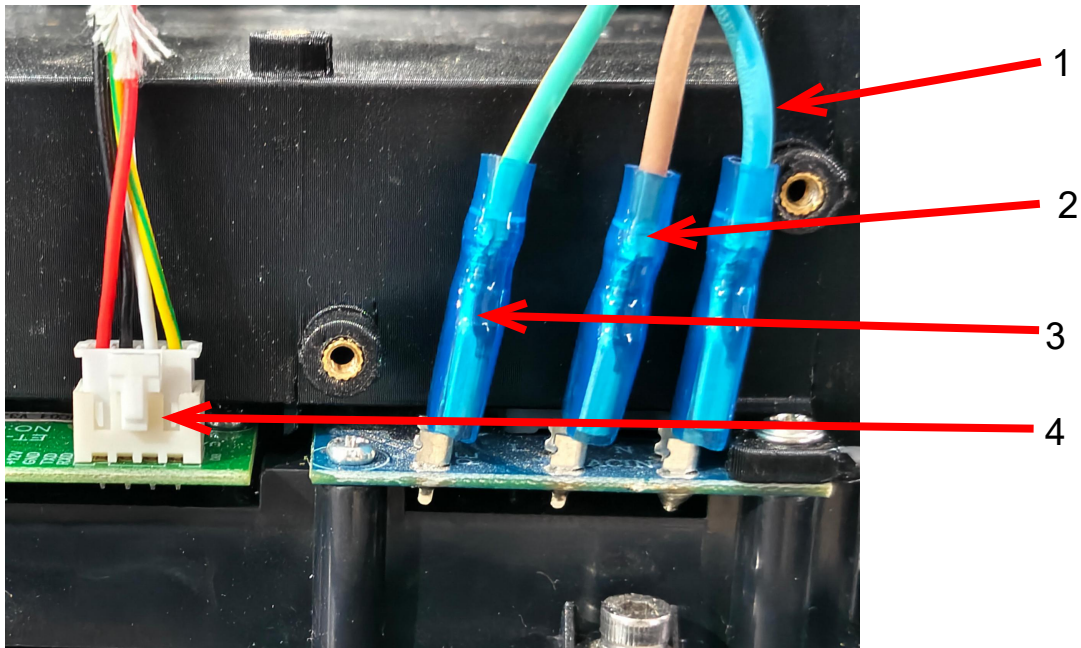

1. Blue Cable: - Neutral Power Cable
2. Brown Cable: Live Power Cable
3. Yellow/Green Cable: Ground Cable
4. Colored Cable: Control Panel Signal Cable

WARNING: Failure to connect cabling correctly will result in power failure during machine startup.

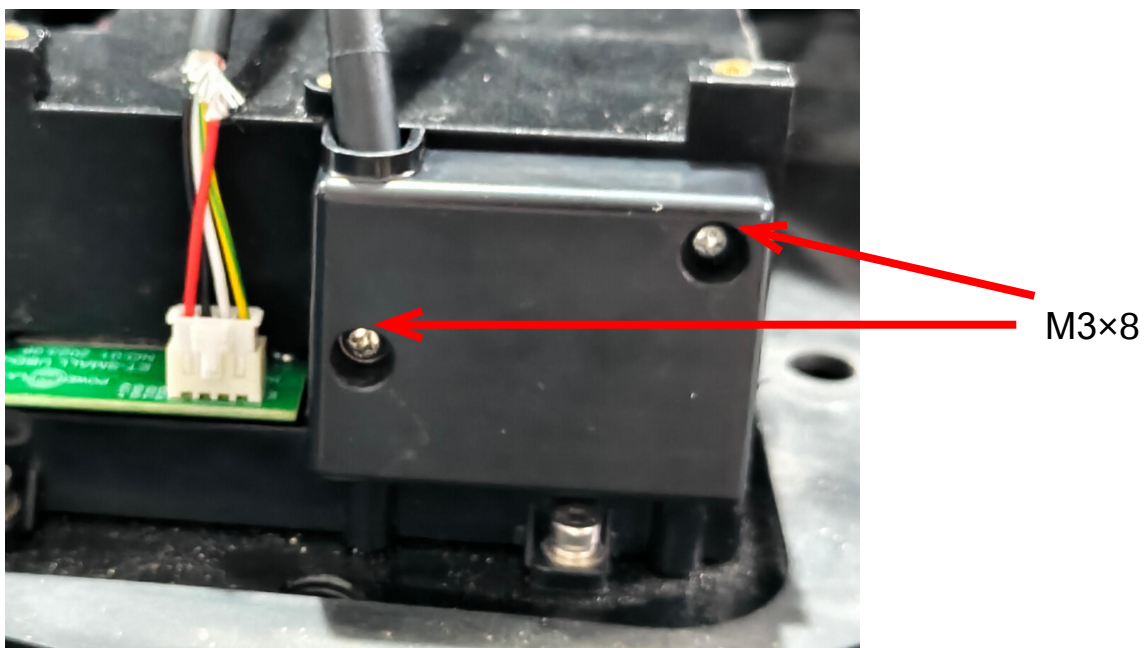

STEP 3:

After all data cable connections are made. Lower the Column into place with Guide Bolts going through correct holes (be careful not to pinch any cables) After the Column is in place and Guide Bolts are through their holes, remove the Guide Bolts and attach the column to the platform using the supplied 3x 16mm securing Platform Bolts including spring and flat washers. (*HINT: do one at a time to keep alignment*)



STEP 4:

Carefully remove assembled pro8 from Risers, making sure it is on level surface. Connect the Power Cord to the back of the pro8 and plug in to the nearest power outlet and turn ON and test. Place all accessories on top of pro8 Platform.

